

Maintenance Sub Items

If a Maintenance Minder indicator does not appear more than 36 months after the item 7 is reset, change the brake fluid every 3 years.

NOTE: Adjust the valves during services A, B, 1, 2, or 3 if they are noisy.

Number	Maintenance Sub Items
1	Rotate tires, and check tire inflation and condition — Follow the pattern shown in the Owner's Manual.
2	Replace air cleaner element — If the vehicle is driven primarily in dusty conditions, replace every 15,000 miles (24,000 km). Replace dust and pollen filter <ul style="list-style-type: none"> ● Replace filter whenever airflow from the heating and air conditioning system is less than normal. ● If the vehicle is driven mostly in urban areas that have high concentrations of soot in the air from industry and from diesel-powered vehicles, replace every 15,000 miles (24,000 km). Inspect drive belt — Look for cracks and damage, then check the position of drive belt auto-tensioner indicator.
3	Replace M/T fluid <ul style="list-style-type: none"> ● Use Honda MTF. ● Capacity: <ul style="list-style-type: none"> — 1.5 L engine: 1.9 L (2.0 US qt) — 2.0 L engine: 2.15 L (2.27 US qt) Replace CVT fluid <ul style="list-style-type: none"> ● Driving in mountainous areas at very low vehicle speeds or trailer towing results in higher transmission temperatures. This requires transmission fluid changes more frequently than recommended by the Maintenance Minder. If the vehicle is regularly driven under these conditions, have the transmission fluid changed every 25,000 miles (40,000 km). ● Use Honda HCF-2. NOTE: Using the wrong type of fluid will damage the transmission. ● Capacity: 3.7 L (3.9 US qt) Replace A/T fluid <ul style="list-style-type: none"> ● Use genuine Honda Automatic Transmission Fluid (Type 2). NOTE: Using the wrong type of fluid will damage the transmission. ● Capacity: 4.3 L (4.5 US qt)
4	Replace spark plugs Inspect valve clearance (cold) <ul style="list-style-type: none"> ● Intake: 0.21 – 0.25 mm (0.009 in) ● Exhaust: 0.25 – 0.29 mm (0.010 – 0.011 in)
5	Replace engine coolant <ul style="list-style-type: none"> ● Use Honda Long Life Antifreeze/Coolant Type 2, and if necessary add Honda Extreme Cold Weather Antifreeze/Coolant Type 2 (concentrate) as needed for prolonged cold temperatures below -22 °F (-30 °C). ● Capacity (including reservoir) <ul style="list-style-type: none"> — 1.5 L engine M/T: 5.9 L (1.56 US gal) CVT: 6.1 L (1.61 US gal) — 2.0 L engine: 5.1 L (1.34 US gal)
7	Replace brake fluid <ul style="list-style-type: none"> ● Use Honda DOT 3 Brake Fluid. We recommend genuine Honda Brake Fluid. ● Check brake fluid level is between upper and lower marks on reservoir.